

Sony DSC-H9

Recommended Settings for Hawkeye Borescopes

Menu Settings – the following settings are a good starting point. You may find other settings for AF Mode, Exposure Control, Contrast and Sharpness work better for your specific parts.

Set top knob to **P**, so all settings below are shown in the cycle. Press **Menu** to start cycling through the settings.

Image Size	5M
Color Mode	Normal
White Balance	Auto
eV/Flash Level	0
Red Eye Reduction	Off
Contrast	DRO/Auto
Sharpness	+
Steady Shot	Shooting

Press Center of Control Button to enter SETUP



Shooting Settings 1

AF Illumination	Off
Grid Lines	Off
AF Mode	Monitor
Digital Zoom	Off
Conversion Lens	Off

Shooting Settings 2

Flash Sync	Front
Auto Orientation	Off
Auto Review	On
Expanded Focus	On




On left side of camera – Night Shot: Off

On top of camera – Exposure Control  Based on Center Brightness 

Control Button

Flash	No Flash 
Macro Mode	Off 

Try the **Top Knob** in the following 3 settings, listed in most likely to work well order.

-  Program Mode
-  High Sensitivity Mode
-  Scenery / Mountain Mode

While in Program Mode it is possible to change the ISO (film speed) setting using the Control Wheel and Control Button. See the User Manual for details on how to do this. Lower ISO settings need more light, but have less noise.